

FERVE F-2400

BATTERY & ALTERNATOR TESTER





- Lea el manual de instrucciones antes de usar el FERVE F-2400.
- Read the instruction manual before using the FERVE F-2400.
- Veuillez lire le manuel d'instructions avant d'utiliser le FERVE F-2400.
- Lesen Sie vor der Benutzung des FERVE F-2400 die Bedienungsanleitung.
- Lees de gebruiksaanwijzing aandachtig door alvorens de FERVE F-2400.



- Evite las llamas y chispas.
- Avoid flames and sparks.
- Eviter flammes et étincelles.
- Offene Flammen und Funken.
- Vermijdt vuur en vonken.



- ¡Atención! Gas explosivo.
- Attention! Explosive gas.
- Attention! Gaz explosif.
- Achtung! Explosionsgefahr durch Gas.
- Let op! Knalgas.



- No exponga el aparato a la lluvia.
- Do not expose the equipment to rain.
- N'exposez pas l'appareil à la pluie.
- Setzen Sie das Gerät nicht dem Regen Aus.
- Zet het apparaat niet in de regen.




- Utilícelo en un lugar ventilado.
- Use it in a well-ventilated place.
- Utilisez-le dans un lieu aéré.
- Benutzen Sie das Gerät in einem belüfteten Raum.
- Gebruik het apparaat in een geventileerde ruimte.




- El ácido de las baterías es corrosivo.
- Battery acid is corrosive.
- L'acide des batteries est corrosif.
- Die Säure der Batterie ist korrosiv.
- Het accuzuur is corrosief.

BATTERY TEST







A

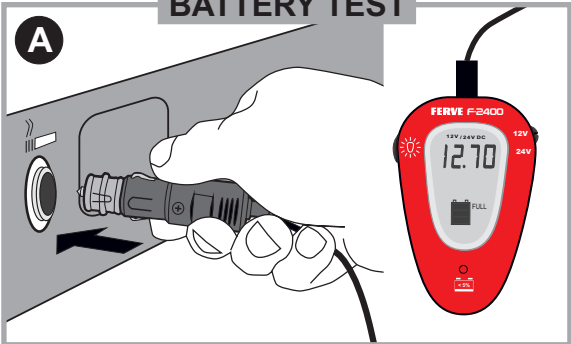


B

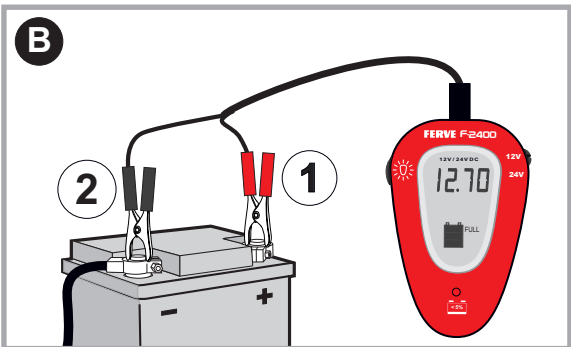


1

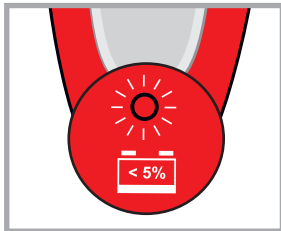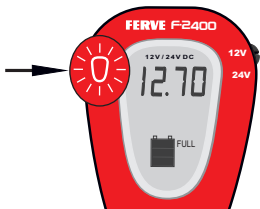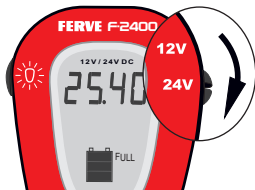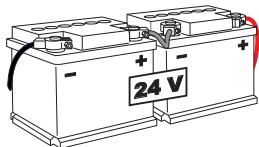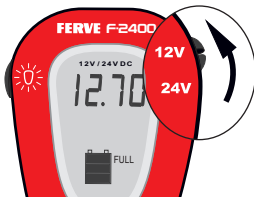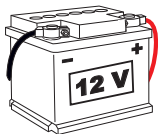

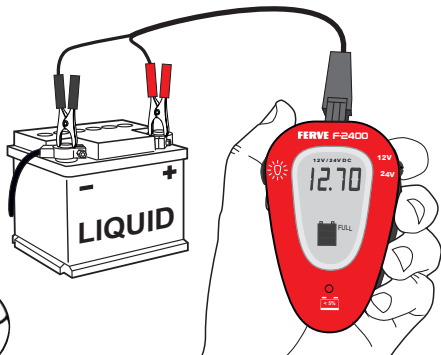


 12 V	 24 V	 %
< 11.9	< 23.8	< 20%  POOR
12.1	24.3	25%  FAIR
12.3	24.6	50%  FAIR
12.5	25	75%  FAIR
12.7	25.4	100%  FULL

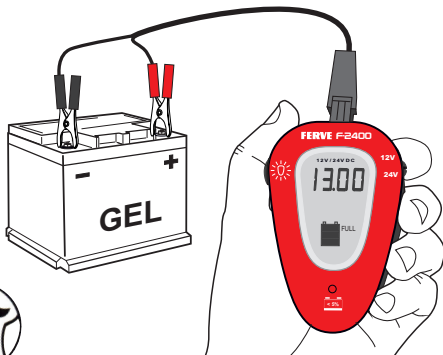

 12 V	 24 V	 %
< 12.1	< 24.2	< 20%  POOR
12.3	24.5	25%  FAIR
12.5	25	50%  FAIR
12.8	25.5	75%  FAIR
13	26	100%  FULL

ALTERNATOR TEST


1

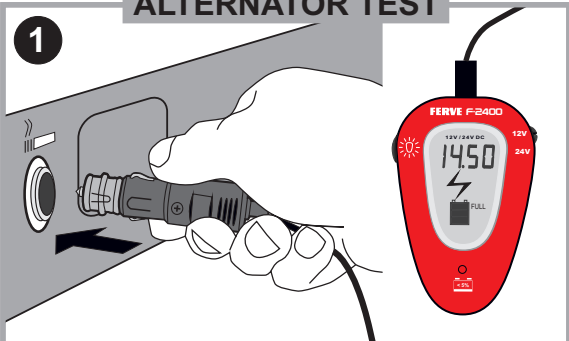




2




3

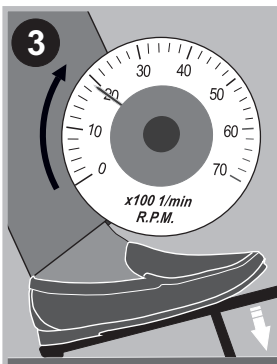

4

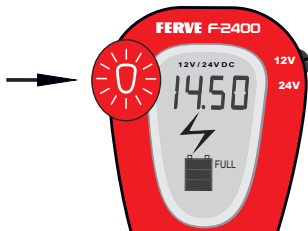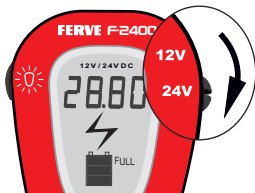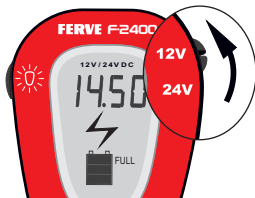

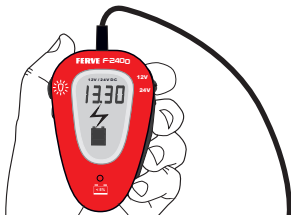

< 13.20

< 26.40

BAJO
LOW
BAS
NIEDRIG
ZWAK

13.2 - 15.0

26.4 - 30.5





 **OK**

> 15.10


> 31.00



ALTO
HIGH
HAUT
HOCH
HOOG

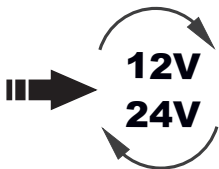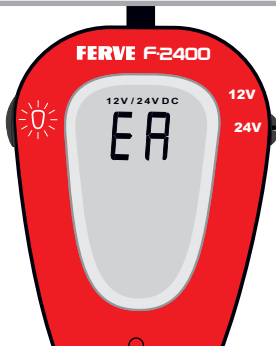ERROR

Voltage	12V - 24V
Working range	5.0V - 39.0V
Accuracy	+/- 0.1V
Power consumption	5.9mA (12V) 11.6mA (24V)
Temperature range	-10°C / +45°C

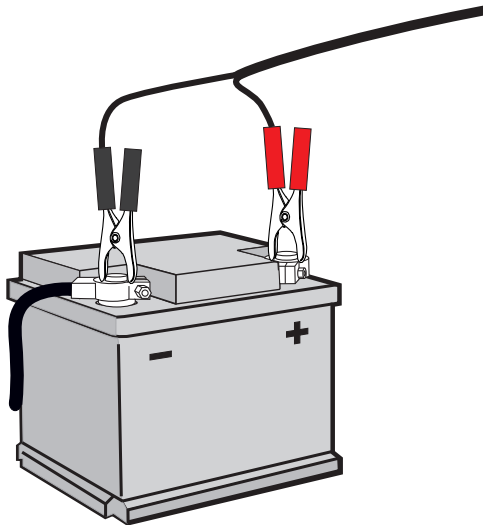

© FERVE, S.A. - Ctra. Calafell, 15-25
43700 - El Vendrell (Tarragona)
www.ferve.com